


4) Make sure string goes under bend and then bend back over to lock

1) Bend 90 degree angle in string about an inch past the tuning peg

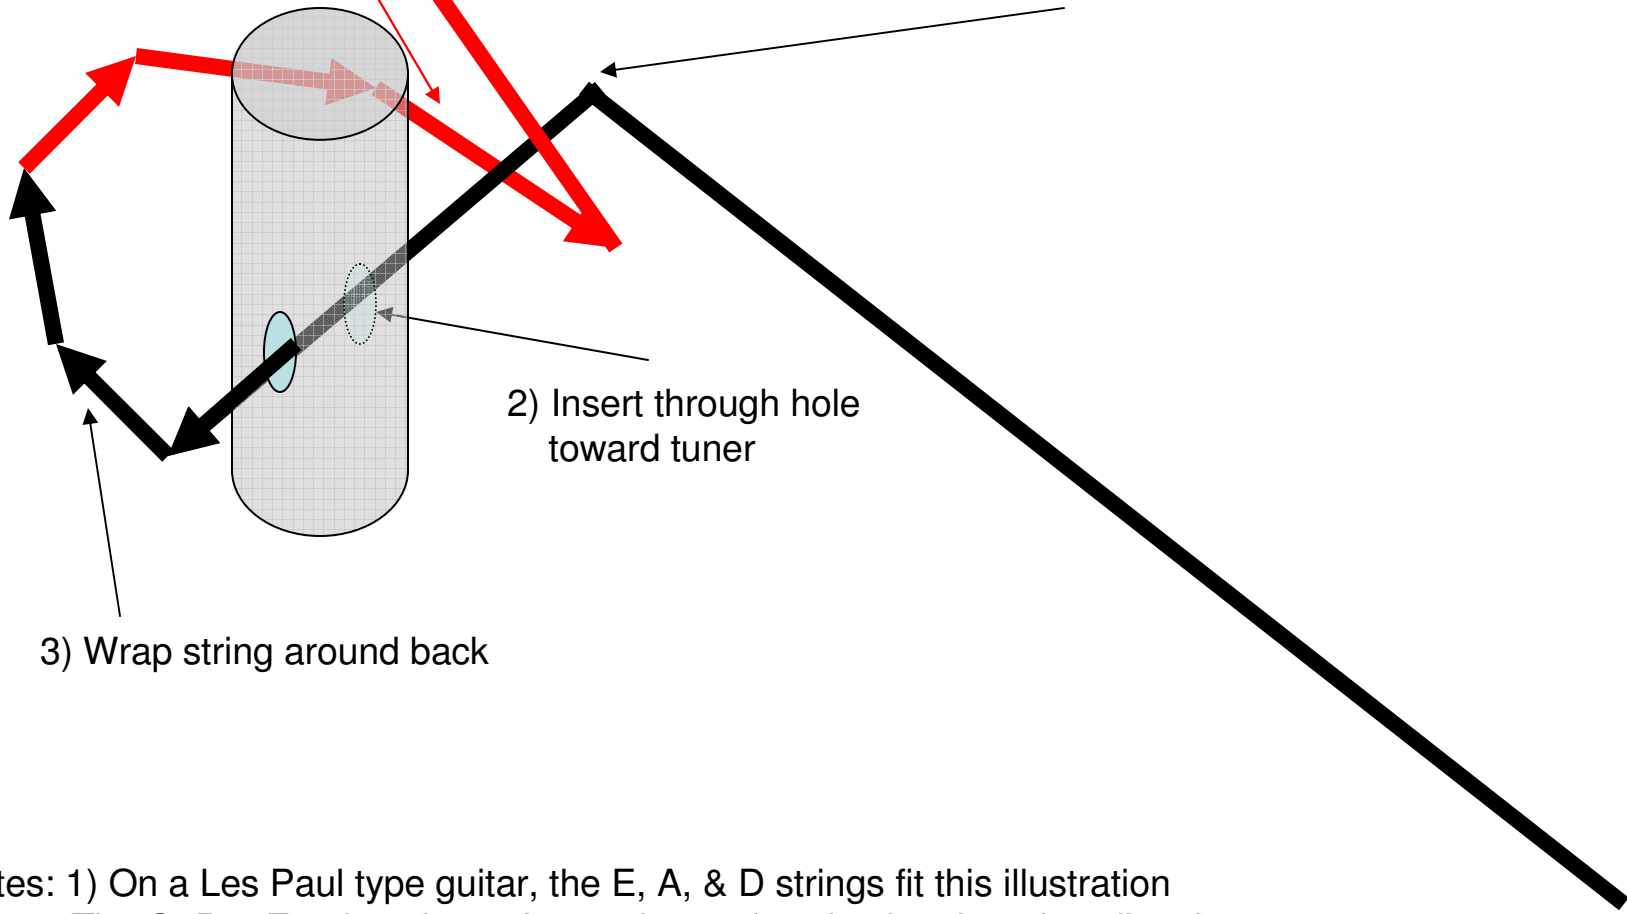

2) Insert through hole toward tuner

3) Wrap string around back

Notes: 1) On a Les Paul type guitar, the E, A, & D strings fit this illustration
The G, B & E strings have the 90 degree bend going the other direction.
2) On Stratocaster style guitars with the tuners all on the top side, use this illustration.